

Bellows Problem Scenario

Problem:
Tube will not unwind on pull out



Bellows Problem Solutions

- Pawl hold out rod not placed in the hold out position
- Pawl hold out rod deformed so that it cannot raise pawls to a disengaged position
- One or both the pawls have gotten below hold out rod
- Spool brake adjusted too tightly
- Tube has become crossed or tangled from coasting on pull out

